

# Globe Style Check Valve Disassembly Instructions


## Model 402BT & BTR

Sizes 2" Thru 12" / 50 mm Thru 300mm

**FLOMATIC**  
Flomatic Corporation



### Ring Removal

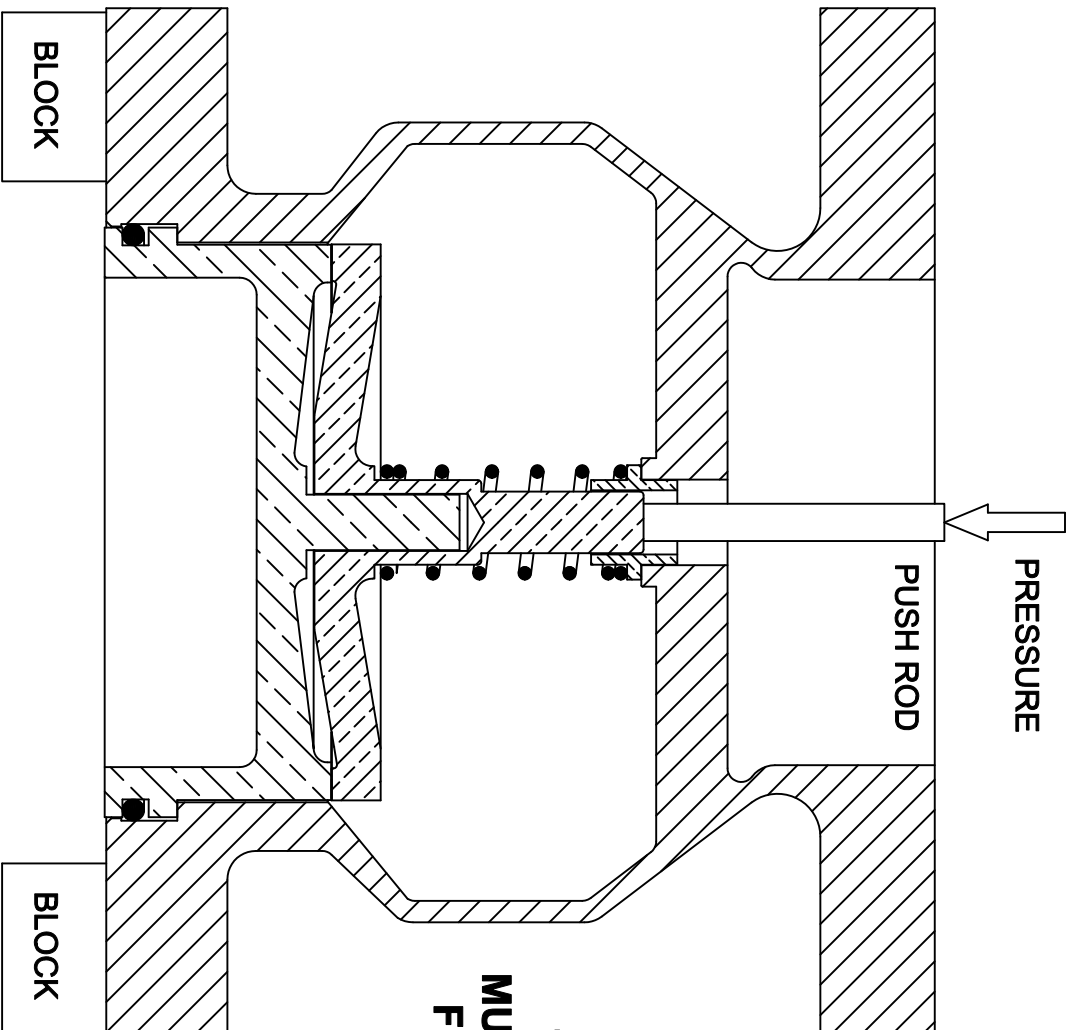

**WARNING:**  
DO NOT LIFT VALVE BY  
THE SEAT RING SPOKES  
MUST BE ASSEMBLED WITH A  
FLANGE AND A FULL FACE  
GASKET ON BOTH ENDS

Patent No. 6,024,121

Flomatic Corporation can accept no responsibility for possible errors in catalogues, brochures and other printed material. Flomatic Corporation reserves the right to alter its products without notices. This also applies to product already agreed. All trademarks in this material are property of the respective companies. All right reserved. ©2011 Flomatic Corporation. The drawings & information on this drawing sheet are the sole & exclusive property of Flomatic Corporation. Any reproduction, distribution, display or use of these drawings or information in whole or in part without written authorization of Flomatic Corporation is strictly prohibited.

**FLOMATIC** VALVES

June 26, 2003  
120300COM Rev. D (5/11)

FLOMATIC CORPORATION  
GLENS FALLS, N.Y. 12801  
PHONE (518) 761-9797  
FAX (518) 761-9798